

## Roofing Solutions Built to Last!

### Installing Your New Roof

Supplied with one-piece of EPDM rubber membrane this kit couldn't be easier to install!

There's no need to join multiple pieces together making the installation both quick and extremely simple. Follow the instructions overleaf to prepare and install your roof kit onto any timber garden roof, whether pitched or flat.

#### PERFECT FOR:

- ⊕ Sheds and Summerhouses
- ⊕ Office Rooms and Cabins
- ⊕ Play Houses and Dens
- ⊕ Bike and Garden Storage
- ⊕ Pet Homes and Shelters



INSTRUCTIONS OVERLEAF

# Fitting Instructions for Shed Roofs




**1** Remove old roof covering and nails. Re-board if roof is rotten or roofing felt doesn't come off cleanly.



**2** Apply the rubber membrane by laying it in position on the roof for 20 – 60 minutes. Fold the membrane back to the centre of the roof ready for adhesive.



**3** Apply the adhesive to the entire roof working 'in stages'. Roll the membrane gradually onto the adhesive whilst wet.

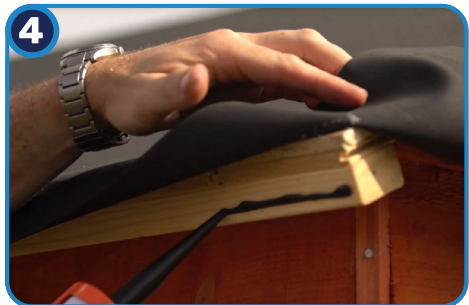

**4** Apply a bead of edge sealant and press the membrane onto it. Once dried this will hold the membrane securely.



**5** Reinstall any existing timber barge boards to help secure the membrane perimeter. Replace if rotten.



**6** Remove any excess membrane using scissors. If an edge trim is used, install this first then use the underside of the trim as a guide to cut the membrane.



A video tutorial is available on **YouTube** or via **QR Code**. Scan the QR Code, click the link provided on screen.



Watch + Learn